



7325 Roseville Road  
Sacramento, CA 95842  
Customer Service: 1 800 747-1522  
Phone: (916) 783-1951  
Fax: (916) 783-1952  
Email: [sales@raymarinc.com](mailto:sales@raymarinc.com)  
[www.raymarinc.com](http://www.raymarinc.com)

## Installation Instructions For DSPRM1U

---

The DSPRM1U is a mounting bracket kit with a bracket that is 1U in height and is used to mount 1 or 2 DSP9612FP modems (standalones) into a rack. The DSPRM1U kit comes with the following parts:

- 1 - DSP9612FP SA Mounting Bracket (DSPRM1U)
- 1 - Blank out for DSP MTG Bracket
- 2 - #4-40 x 3/8" screws, pan head, black oxide
- 2 - #4-40 Nuts

This mounting bracket can only be used on the DSP9612FP modems. Please contact the Raymar-Telenetics sales support team for details regarding all other modems.

Installation steps:

1. Remove the screws from the front of the DSP9612FP modem as shown in Figure 1 below.



Figure 1.



7325 Roseville Road  
Sacramento, CA 95842  
Customer Service: 1 800 747-1522  
Phone: (916) 783-1951  
Fax: (916) 783-1952  
Email: [sales@raymarinc.com](mailto:sales@raymarinc.com)  
[www.raymarinc.com](http://www.raymarinc.com)

2. Remove the bezel and front panel from the modem as shown in Figure 2.



Figure 2.

3. Place the modem under the bracket and align the modem enclosure screw holes with the bracket as shown below in Figure 3.

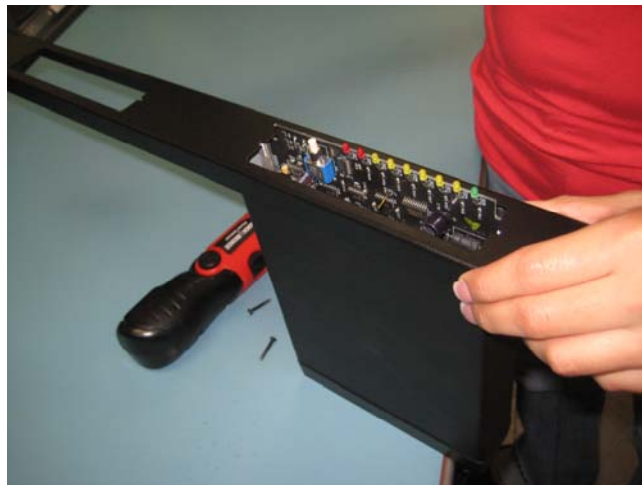


Figure 3.



7325 Roseville Road  
Sacramento, CA 95842  
Customer Service: 1 800 747-1522  
Phone: (916) 783-1951  
Fax: (916) 783-1952  
Email: [sales@raymarinc.com](mailto:sales@raymarinc.com)  
[www.raymarinc.com](http://www.raymarinc.com)

4. Place the bezel and front panel of the modem over the bracket. Using the same two screws from the modem, tighten the screws back into place to secure the front panel and the bracket. Do not over tighten the screw. The two screws are all that is required to hold the modem onto the bracket. Gently tug the modem to ensure that the modem is secured in place, as shown in Figure 4.



Figure 4.

5. If using two modems on the DSPRM1U, repeat steps 1-4 and remove the blank out from the mounting bracket kit. The blank out is only necessary if one modem is being used in the bracket. (To install the second modem, try using an edge of a table to stabilize the first modem and allow for the second modem to be aligned into place).
6. Finally, use a #6 or #8 screw (not supplied) to mount the DSPRM1U bracket onto the rack.